

VRK Series System Operation Guide



Call buttons

Press the appropriate button and wait for a reply. A reassurance tone will be heard.

Trades button (optional)

For Postman and deliveries. Press and hold during the allocated time to unlock the door.

Microphone

Speaker

Intelligent Security & Fire Ltd.

801 Audio Telephone



Key button

This button opens the calling entrance