

FADINI
l'apricancello
Made in Italy

I Elpro • 10 PLUS CEI

MONOFASE - TRIFASE PER
CANCELLI SCORREVOLI E
AUTOMAZIONI CON FINECORSO
LIBRETTO DI ISTRUZIONI

- FUNZIONE PASSO PASSO
- UOMO PRESENTE
- APERTURA PEDONALE
- SPIA DI SEGNALAZIONE DELLO STATO DELL'AUTOMAZIONE
- POSSIBILITA' DI ESCLUDERE LAMPEGGIANTE IN PAUSA
- LUCE DI CORTESIA TEMPORIZZATA
- FUNZIONE OROLOGIO

pag. 1,2,3

GB Elpro • 10 PLUS CEI

SINGLE- AND THREE-PHASE FOR
SLIDING GATES AND AUTOMATIONS
FITTED WITH LIMIT SWITCHES
INSTRUCTIONS

- STEP BY STEP
- HOLD-ON SWITCHED
(DEADMAN) CONTROL
- PEDESTRIAN OPENING
- GATE STATUS INDICATION
- FLASHING LAMP DURING DWELL
TIME. MADE SWITCHED ABLE
- ADJUSTABLE COURTESY LIGHT TIME
- TIME CLOCK OPTION

page 1,4,5

F Elpro • 10 PLUS CEI

MONOPHASE - TRIPHASE POUR
PORTAILS COULISSANTS ET
AUTOMATISMES AVEC FIN DE COURSE
NOTICES D'INSTRUCTION

- FONCTION PAS-PAS
- HOMME MORT
- OUVERTURE PIETON
- VOYANTS A DIODE DE SIGNALISATION DE L'ETAT DE L'AUTOMATISATION
- POSSIBILITE D'ETEINDRE LA LAMPE DE SIGNALISATION EN PAUSE
- LAMPE D'ECLAIRAGE TEMPORISEE
- FONCTION HORLOGE

page 1,6,7

D Elpro • 10 PLUS CEI

EINPHASIG - DREIPHASIG FÜR
SCHIEBETORANTRIEBE UND
AUTOMATIONEN MIT ENDSCHALTER
ANLEITUNG

- SCHRITT-IMPULS-FUNKTION
- TOTMANN-BEDIENUNG
- GEHTÜRFUNKTION
- AUTOMATION-STATUS ANZEIGELAMPE
- MÖGLICHE AUSSCHALTUNG DER BLINKLEUCHTE BEI DER PAUSE
- EINSTELLBARES BEDIENUNGLICHT
- UHR-FUNKTION

Seite 1,8,9

E Elpro • 10 PLUS CEI

MONOFASICO - TRIFASICO PARA VERJAS
DESGLIZANTES Y AUTOMATISMOS CON
TOPES DE RECORRIDO
FOLLETO DE INSTRUCCIONES

- FUNCIONAMIENTO PASO A PASO
- HOMBRE PRESENTE
- ABERTURA PARA PASO DE PEATONES
- LÁMPARA TESTIGO QUE SEÑALA EL ESTADO DEL AUTOMATISMO
- POSIBILIDAD DE EXCLUIR EL DESTELLADOR EN PAUSA
- LUZ AUXILIAR TEMPORIZADA
- FUNCIÓN RELOJ

pág. 1,10,11

NL Elpro • 10 PLUS CEI

EENFASE - DRIEFASE VOOR
SCHUIFHEKKEN EN AUTOMATISERINGEN
MET EINDSCHAKELAAR
HANDLEIDING

- STAP-VOOR-STAP FUNCTIE
- DODEMANSFUNCTIE
- VOETGANGERSDOORGANG
- SIGNALERINGSLAMP AUTOMATISERINGSSTATUS
- MOGELIJKHEID UITSCHAKELING KNIPPERLICHT BIJ PAUZE
- INTELNBARE INDICATIELAMP
- KLOKFUNCTIE

pag. 1,12,13

Dis. N. 4333




meccanica
FADINI
s.n.c.

Via Mantova, 177/A - 37053 Cerea (Verona) Italy - Tel. +39 0442 330422 r.a.
Fax +39 0442 331054 - e-mail: info@fadini.net - www.fadini.net



pag. 1

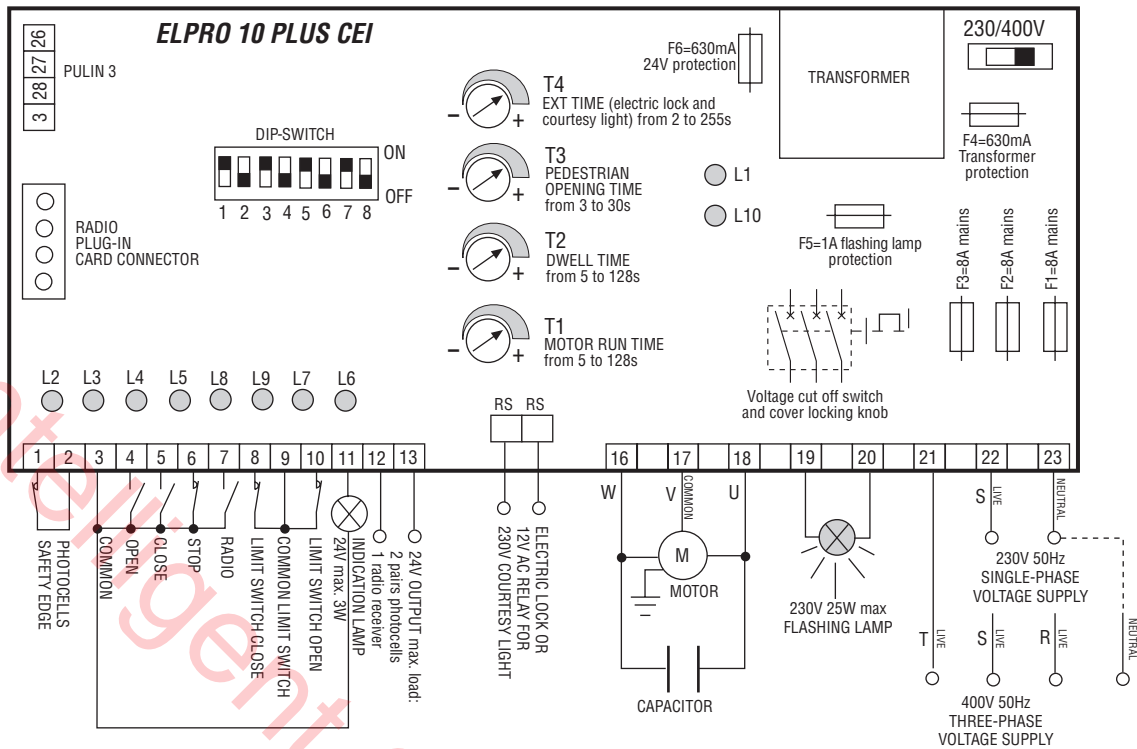

The electronic control panel Elpro 10 Plus CEI, new generation, is designed to operate sliding gates. Power supply is 230/400V single-phase and three-phase. Built in full compliance with BT 93/68/CE Low/High Voltage and EMC 93/68/CE Electro-Magnetic Compatibility Regulations. Fitting operations are recommended by a qualified technician in conformity to the existing safety standards. The manufacturing company declines any responsibility for incorrect handling and application; also, it reserves the right to change or update the control panel any time.

 
PLEASE NOTE:

- The control panel must be installed in a sheltered, dry place, inside the box provided with it.
- Fit the mains to the control panel with a 0.03A high performance circuit breaker.
- Use 1.5 mm² section wires for voltage supply, electric motor and flashing lamp. Maximum recommended distance 50m.
- Use 1 mm² section wires for limit switches, photocells, push-buttons/key-switch and accessories.
- Bridge terminals 1 and 2 if no photocells are required.
- Bridge terminals 3 and 6 if no key- or push-button switches are required.

N.W: To fit extra accessories such as lights, CCTV etc. use only solid state relays to prevent damages to the microprocessor.

Dip-Switch:

- 1= ON. Photocells. Stop while opening
- 2= ON. Radio. No reversing while opening
- 3= ON. Automatic closing
- 4= ON. Preflashing activated
- 5= ON. Radio. Step by step. Stop in between
- 6= ON. Dead Man Control (Dip 4=OFF and Dip 3=OFF)
- 7= ON. No lamp on during dwell time
- 8= OFF. No function



In case of failure of the panel:

- Check voltage supply. It must be 230V or 400V 50Hz
- Check fuses
- Check photocells if contacts are normally closed
- Check all NC contacts
- Check that no voltage drop has occurred from the control panel to the electric motor

 
Led Status Indication:

- L1= 230V 50Hz power supply. A light
- L2= Photocells, if obstructed light goes off
- L3= Open. A light whenever an Open pulse is given
- L4= Close. A light whenever a Close pulse is given
- L5= Stop. It goes off on pulsing Stop
- L6= Radio. It goes on by pressing a transmitter button
- L7= Gate Status; it flashes on gate opening
- L8= Limit switch Close; off when gate is closed
- L9= Limit switch Open; off when gate is open
- L10= It stays on for a time equal to the time set on T4



LOW VOLTAGE ELECTRICAL CONNECTIONS


Photocells and Safety Edge:




DIP-SWITCH 1:

- ON: Photocells stop gate while opening, reverse it on closing once obstacle is removed
- 1 OFF: Photocells do not stop gate while opening, reverse it on closing in case of an obstacle

Button switch:

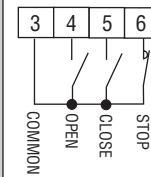


Limit switch:

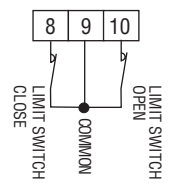

Radio Contact:


- Open/Close (Standard)
- Travel reversing on pulsing
- Step by step

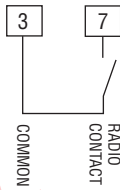


DIP-SWITCH 2 and 5 (NEVER set BOTH of them to ON at the same time):

- ON: Gate is not reversed while opening
- 2 OFF: Any pulse reverses the gate
- ON: Step by step. Stop in between
- 5 OFF: Standard operating mode

 Push Button Switch Pulin 3:




24V 3W Indication Light:

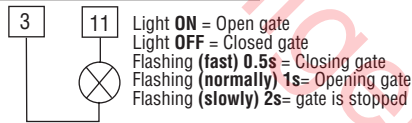

Courtesy light:





 Electric lock:




ELECTRIC POWER CONNECTIONS

Single- and Three-phase Motors:

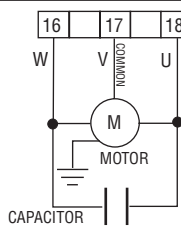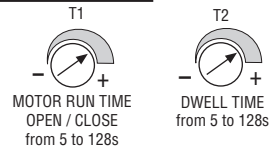


Flashing lamp:

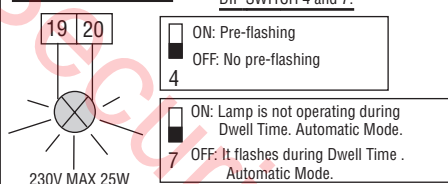

DIP-SWITCH 4 and 7:

- ON: Pre-flashing
- 4 OFF: No pre-flashing
- ON: Lamp is not operating during Dwell Time. Automatic Mode.
- 7 OFF: It flashes during Dwell Time. Automatic Mode.

Power supply:

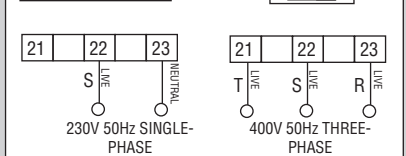


OPERATING MODES

Automatic / Semiautomatic:

Automatic Operation: any pulse opens the gate, the gate stays open as long as the Dwell time expires as set by T2 trimmer, then it closes automatically, no pulsing is required.

 Semi-automatic Operation: any pulse opens the gate that stays open. A second pulse to Close is required for the gate to close.




DIP-SWITCH 3

- ON= Automatic Closing
- 3 OFF= No Automatic. Semi-automatic closing by pulse

Pedestrian Opening:

Trimmer T3 from 3 to 30s. It can be activated by any pulse (eg. by remote control) superior to 2s

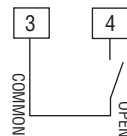

Hold on switched (Deadman) control:

Open and Close operations are achieved "by holding a switch on" (no relay self-holding is involved) therefore a physical attendance is required to keep the gate opening or closing until either the button or key is released.

DIP-SWITCH 6

- ON= Deadman Control. Dip-switch 4=OFF and Dip-switch 3=OFF
- 6 OFF= Standard Operations

Remote Controlled Operations Excluded during

Dwell Time on Automatic Mode:

With this setting it is not possible to operate the gate by remote control during the dwell time on automatic mode. DIP-SWITCH 2=ON, 3=ON and 5=ON

- ON: No reversing on opening
- 2 OFF: Travel reversing on any pulsing

- ON= Automatic Closing
- 3 OFF= Closing by Pulse

- ON: Step by step. Stop in between
- 5 OFF: Standard Operations

Time clock:


How it works: Set the clock to the required time. On the pre-set time the gate is automatically opened and held open. Any further pulsing (even by remote control) is not accepted by the system until the time pre-set by the clock has expired. On expiring and after the pre-set dwell time the gate is closed automatically.

T3 trimmer on to zero, Dip-Switch 3=ON.




DIP-SWITCH No.3=ON Automatic Closing

- ON= Automatic Closing
- 3 OFF= No Automatic. Semi-automatic closing by pulse

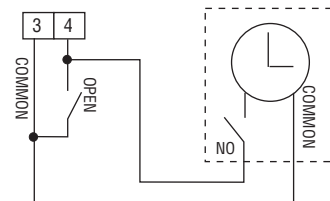

FADINI
the gate opener
Made in Italy



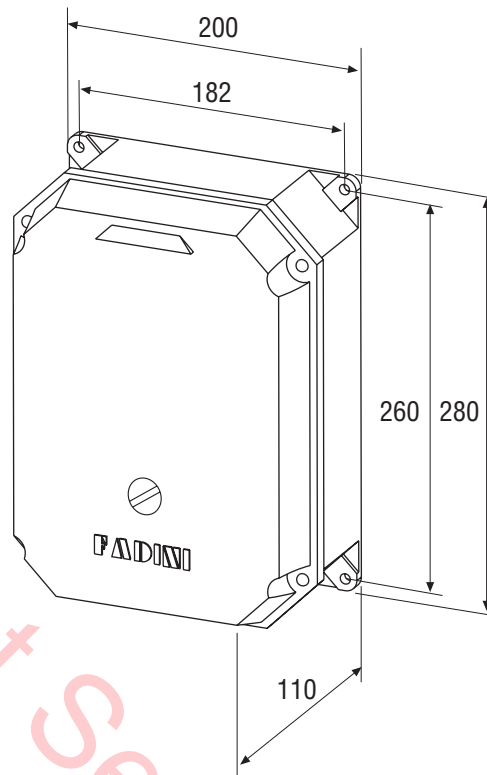

CE

- I - Prima dell'installazione da parte di personale tecnico qualificato, si consiglia di prendere visione del Libretto Normative di Sicurezza che la Meccanica Fadini mette a disposizione.
- GB - Please note that installation must be carried out by qualified technicians following Meccanica Fadini's Safety Norms Manual.
- F - L'installation doit être effectuée par un technicien qualifié suivant le manuel des Normes de Sécurité de Meccanica Fadini.
- D - Vor der Montage von einem Fachmann, wird es empfohlen die Anleitung zur Sicherheitsnormen, die Meccanica Fadini zur Verfügung stellt, nachzulesen.
- E - Antes de la instalación por el personal técnico calificado, se recomienda leer detenidamente el Folleto de la Reglamentación de Seguridad que la empresa Meccanica Fadini pone a su disposición.
- NL - Vòòr installatie, dat door bevoegd technisch personeel moet worden uitgevoerd, wordt het aangeraden de Handleiding met de Veiligheidsnormen door te lezen die Meccanica Fadini tot beschikking stelt.



meccanica
FADINI
s.n.c.

Via Mantova, 177/A - 37053 Cerea (Verona) Italy - Tel. +39 0442 330422 r.a. - Fax +39 0442 331054
e-mail: info@fadini.net - www.fadini.net

La ditta costruttrice si riserva di apportare modifiche al presente libretto senza preavviso