

REFERENCE ONLY

ADVANTAGE ZX6 / AJ600N

USER PROGRAMME

CHANGE USER CODE

ENTER USER CODE or 1234 - ENTER NEW CODE - PRESS ✓ or ARM

ENGINEER PROGRAMME

ENGINEER CODE or 9999 (CLEAR FLASHING)

THEN PRESS :-

- | | | |
|--------------------------|-------|-------------------------------------|
| CHANGE ENGINEER CODE | - 1 - | ENTER NEW CODE - PRESS ✓ or ARM |
| EXIT TIME | - 2 - | ENTER NUMBER OF SECONDS |
| ENTRY TIME | - 3 - | ENTER NUMBER OF SECONDS |
| SIREN DURATION | - 4 - | ENTER NUMBER OF MINUTES |
| CHANGE USER CODE | - 5 - | ENTER NEW CODE - PRESS ✓ or ARM |
| SELECT PART GUARD ZONES | - 6 - | ENTER ZONE NUMBERS - PRESS ✓ or ARM |
| SELECT WALKTHROUGH ZONES | - 7 - | ENTER ZONE NUMBERS - PRESS ✓ or ARM |
| REMOTE PART GUARD | - 8 - | PRESS 1 - PRESS ✓ or ARM |
| SELECT CODE ARMING | - 8 - | PRESS 2 - PRESS ✓ or ARM |
| SYSTEM RESET | - 0 - | |

Fire Ltd.