

CHANGING THE USER CODE

Providing that the Advantage ZX6 has not been programmed for code arming it is possible to change the user code without having to contact the installation engineer.

TO SELECT USER CODE

From standby mode

FUNCTION CODE

LED INDICATION

ENTER
USER
CODE

ZONE 1-4 LEDS
ILLUMINATED

PRESS

? ? ? ?

As each key is pressed
one LED will extinguish.

(New User Code)

PRESS

TO STORE

When the key is pressed, a two tone bleep will be heard.

INSTALLATION LOG

INSTALLATION COMPANY ADDRESS _____

CONTACT NAME _____

TELEPHONE No (Day) _____ (Evg) _____

INSTALLATION DATE _____

ZONE	AREA PROTECTED
1	
2	
3	
4	
5	
6	


ADVANTAGE ZX6 USER MANUAL

INTRODUCTION

As supplied the control panel is factory set to be armed without the need to enter the user code. Note that if the Advantage ZX6 is programmed for code arming then it will be necessary to enter the user code prior to the following functions.

THE ADVANTAGE KEYPAD

The advantage keypad uses ICONS to picture the key function a list of key functions follows:

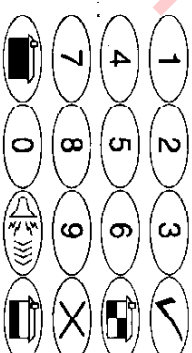

FULL SET

PART SET

ARM

RESET

ZONE OMIT

EVENT REPLAY

0 to 9 NUMERIC KEYS

ARMING THE SYSTEM

PRESS



CLEAR
LED LIT

PRESS



LEAVE VIA
EXIT ROUTE

↕

IF
ZONE LED
IS LIT

↖

CLOSE ALL WINDOWS
AND DOORS, AND
CHECK PIRS

1. Press (Full guard).
2. If zone LED is on, check detectors on that zone i.e. open door.
3. Once clear LED illuminates press (arm).
4. Leave promptly via the exit route whilst the exit tone is sounding. An increase in exit tone tempo indicates last 10 seconds before armed.
5. Once exit sound has stopped the system will be armed.